Repair Procedure - Updated January 10, 2023 - Change to require use of Repair Calculator

## Safety Recall 5321K - Multi-Model Fuel Pump May Fail - MX-5 ONLY Supplement

#### A. VEHICLE INSPECTION PROCEDURE


1. Verify that the vehicle is within the following ranges:

Model	Subject VIN range	Subject production date range
2018-2019MY	JM1ND**** J0 205791 – 206202	From April 5, 2018 through
MX-5 (ND)	JM1ND**** K0 300011 – 303267	October 29, 2018

The asterisk symbol "\*" can be any letter or number.

- If the vehicle is one of the above listed, proceed to Step 2.
- If the vehicle is not within the above ranges, return vehicle to the customer or inventory.
- 2. Perform a Warranty Vehicle Inquiry using your eMDCS System and inspect vehicle for Campaign Labels **Recall 5321K** attached to the vehicle's hood. Refer to eMDCS System Warranty Vehicle Inquiry Results table below.

**NOTE:** Be sure to verify Recall number as the vehicle may have multiple Recall labels.

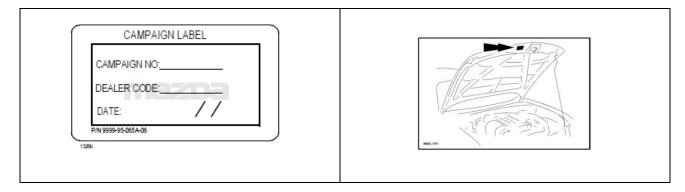

### eMDCS System - Warranty Vehicle Inquiry Results:


If eMDCS displays:	Campaign Label is:	Action to perform:
If no repair date is displayed on the line with RECALL 5321K, it has not	Present	Contact the Mazda Warranty Department at (877) 727-6626, Option 3.
been completed on this vehicle	Not present	Proceed to "REPAIR PROCEDURE".
If repair date is displayed on the line	Present	Return vehicle to inventory or customer.
with RECALL 5321K, it has been completed on this vehicle	Not present	Complete a label and apply to vehicle's hood.
RECALL 5321K is not displayed	Does not apply	Recall does not apply to this vehicle. Return vehicle to customer.

### **B. REPAIR PROCEDURE**



The repair calculator must be used to determine the required fuel pump to be replaced. If the part you received is not correct to the vehicle from the results of the calculator, notify your service manager and return the part immediately to obtain the correct part.

The repair calculator is in MGSS under recall 5321K.

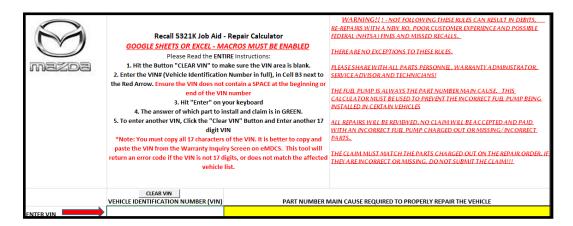

# **Continue to Page 3 below**

# Please watch the video prior to repairing:


### MX-5 Repair Video Link


CAUTION: The disassembly surface must be clean and flat as in the videos. Do not dissemble on a non-flat surface. Be very careful with handling the FDM unit as the fittings or hoses can break. See pages 4 and 5 in the Repair Procedure for ALL MODELS.


This repair method explains the removal of the fuel pump unit safely and most efficient way.

- 1. Remove the fuel pump unit from fuel tank refer to Workshop manual. Click here for the procedure
- 2. Pull up the fuel pump unit carefully until sender unit is appeared

Image for the part 'Sender unit' with float. Be careful the float may damage and bend easily.

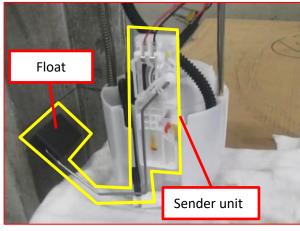

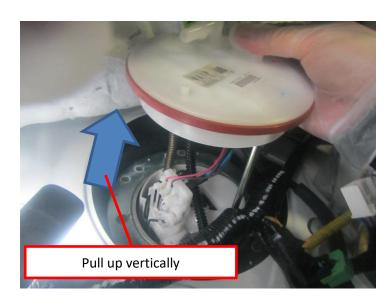


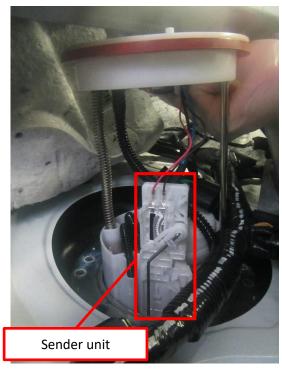


**IMPORTANT NOTE**: Check for broken, cut, frayed or chafed wire on FDM units as in the photo (1) below.

- If found to be damaged, the harness must be replaced. Be very careful with the harness as it can easily be damaged.
- Part ordering: Order the harness from the Restricted Parts Ordering (RPO) Screen through the Dealer Assistance Group (DAG). You must have an open RO and the vehicle must be down. The Parts & Warranty information has been updated with the correct part number for the MX-5.


Harness Part Number	Model
292135-1074 (Length - 25Cl	M) MX-5

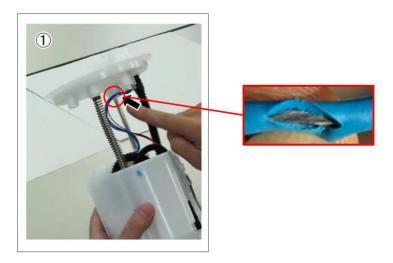


3. Remove the sender unit - refer to VIDEO on MGSS.

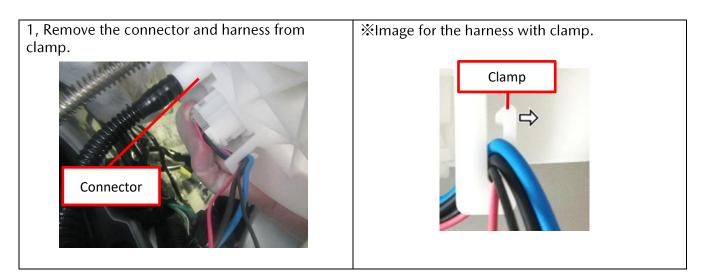

2, Release the 'Lock' then pull up the sender unit vertically.

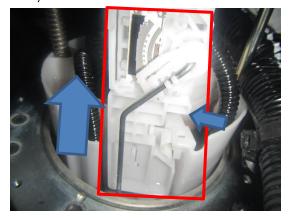

※Image for the 'Lock' position.

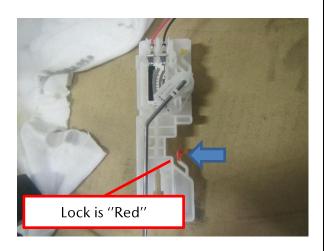

3, Hold the sender unit with harness up and go down the fuel pump unit vertically.




※Do not touch the sensor.




4, Be sure that the float part of the sender unit does not contact the fuel tank.




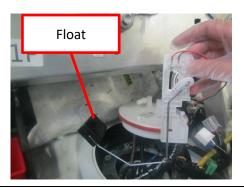

4. Remove the fuel remaining in the unit's reservoir cup with a dropper.

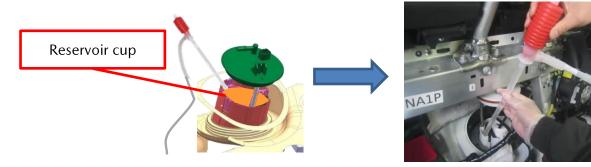

5. Remove the fuel pump unit refer to VIDEO on MGSS.1, Lift the unit to the limit of the frame.

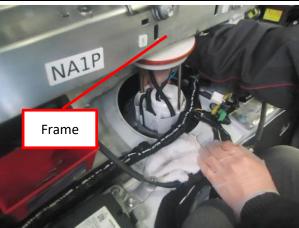

2, Apply the upper part of the unit to the frame and compress.



★Image of compression.



3, Slide the fuel pump unit as shown by the arrow to remove it from the fuel tank.






- 6. Proceed the removal of the fuel pump refer to Recall 5321K Repair procedure All Models
- 7. Install the fuel pump unit with the sender unit removed.
- 1, Compress the unit.





2, While compressed, push under the frame and rotate the fuel pump unit in the direction of the arrow to install the unit into the fuel tank.



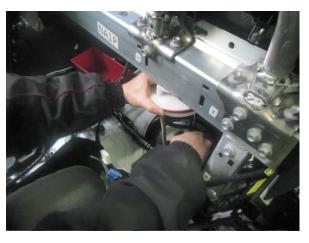

 8. Install the sender unit.



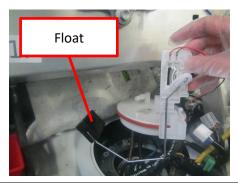





2. Hold the sender unit in your hand and slowly lower the fuel pump unit.





 4, Install the connector and harness from clamp.

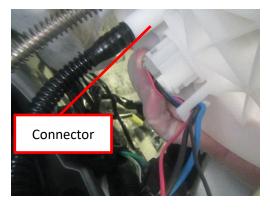






9. Install in the reverse of order of removal. Move to Campaign Label installation on the next page.


E119486

## C. CAMPAIGN LABEL INSTALLATION

1. Fill out a yellow "Campaign Label" (9999-95-055A-06) with Campaign No: "5321K", your dealer code, today's date.

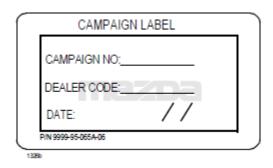

2. Affix it to the hood as shown:

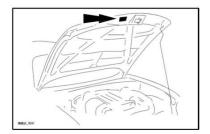

**END OF REPAIR PROCEDURE**